


# Altro Whiterock™ hygienic PVCu wall cladding to junction with P250 PVCu suspended ceiling detail

MAY 2006

typical specification (Ref: CF5)

Fix PMF6 perimeter channel to perimeter of room. Suspend PMF7 primary support channel from soffit with angle section (PGA1). Fix PMF5 ceiling section to underside of PMF7 channel with PMF9 connecting clip. Fix P259 PVCu perimeter trim to PMF6 channel with 13mm wafer head screws. Fix P250 PVCu ceiling board

to PMF5 ceiling section with 13mm wafer head screws. PMF7 primary support channels fixed at max. 1200mm centres. PMF5 ceiling section fixed at max. 600mm centres. Altro Whiterock PVCu wall cladding fixed behind P259 PVCu trim and joint sealed with silicone sealant (A802/A806).

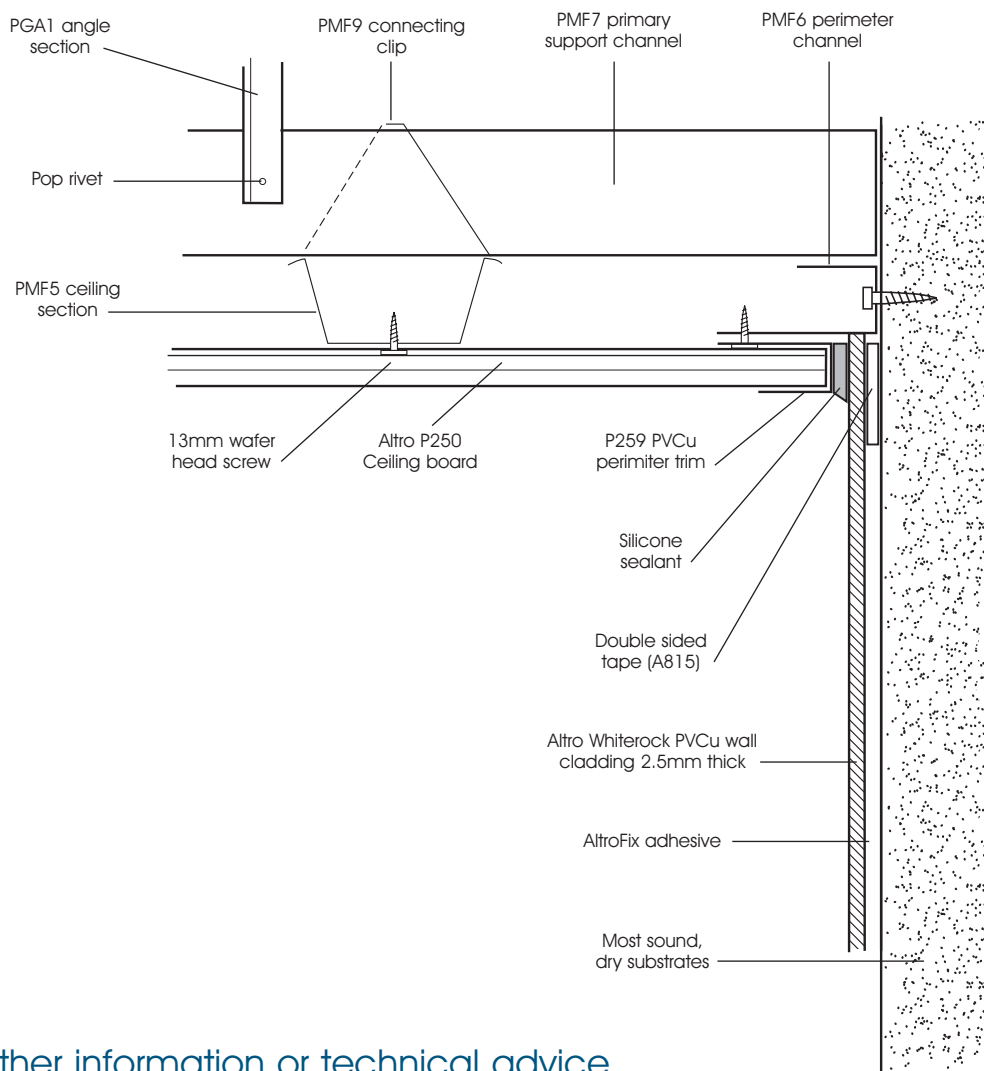

for further information or technical advice

tel: 01502 561364 fax: 01502 531461

e-mail [walls@altro.com](mailto:walls@altro.com) or explore [www.altro.com](http://www.altro.com)