


Altro Whiterock™ hygienic PVCu wall cladding silicone joint detail

MAY 2006

typical specification (Ref: W7)

Altro Whiterock hygienic PVCu wall cladding 2.5mm thick installed over most sound, dry and level substrates, fixed with AltroFix™ adhesive and double sided tape

(A815), positioned approximately 5mm from the edge of the PVCu panel. Joint spacing with 3mm-5mm gap. Seal joint with silicone sealant (A802/A806).

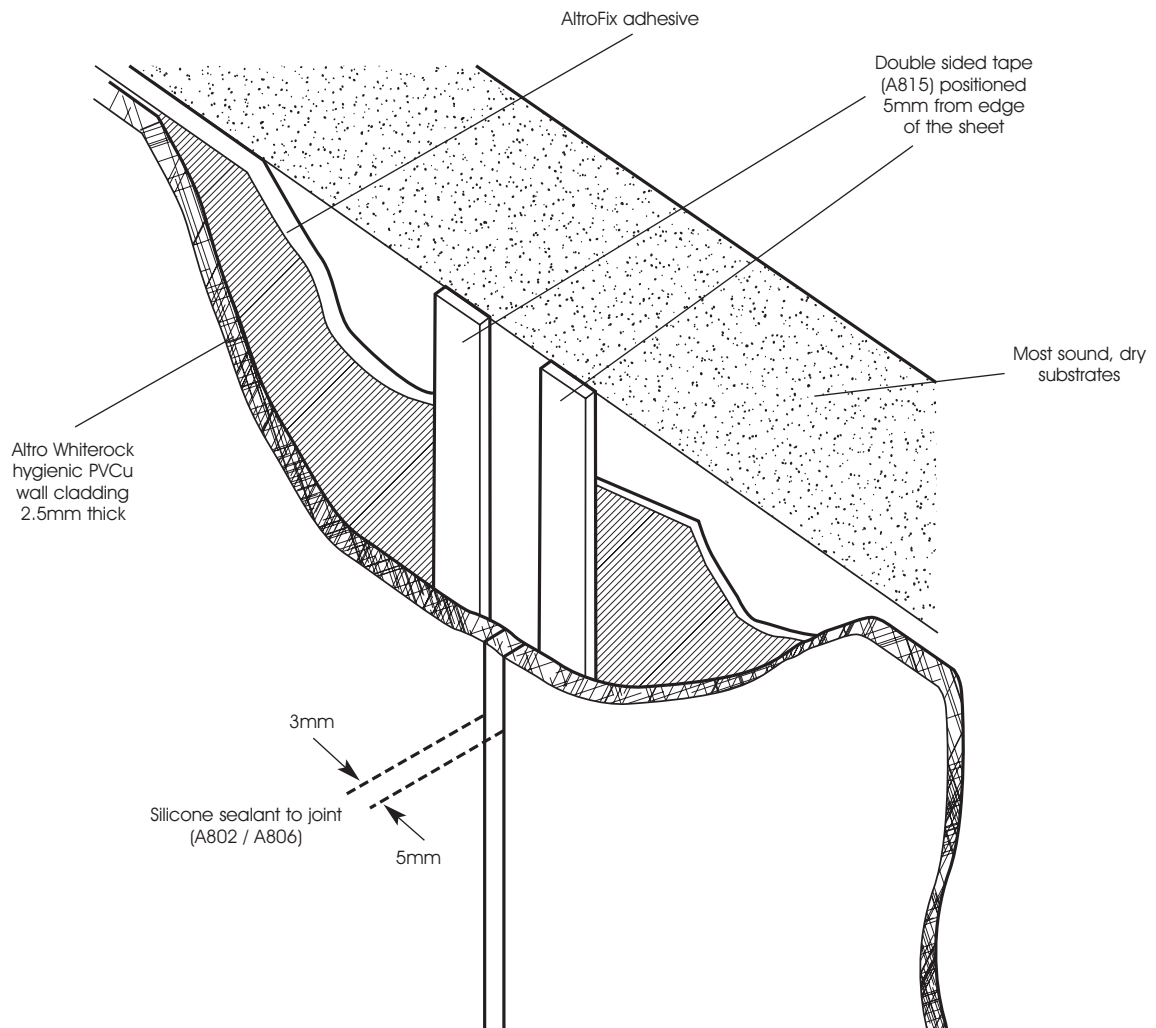

for further information or technical advice

tel: 01502 561364 fax: 01502 531461

e-mail walls@altro.com or explore www.altro.com