


Altro Whiterock™ hygienic PVCu wall cladding to Altro resin flooring detail

MAY 2006

typical specification (Ref: WF5)

Altro resin flooring applied first (to thickness recommended for type/application) and self covered up to a minimum of 100mm to front edge of Image Profile (P445L) (by Image Trim (UK) Ltd.), Altro Whiterock hygienic PVCu wall cladding 2.5mm thick installed over

most sound, dry substrates. Maintain 7mm gap above top edge of resin, install Altro transition strip (G832) incorporating neoprene seal with 5mm gap between wall sheet bottom edge and centre web of strip, seal over resin edge with clear silicone sealant (A803).

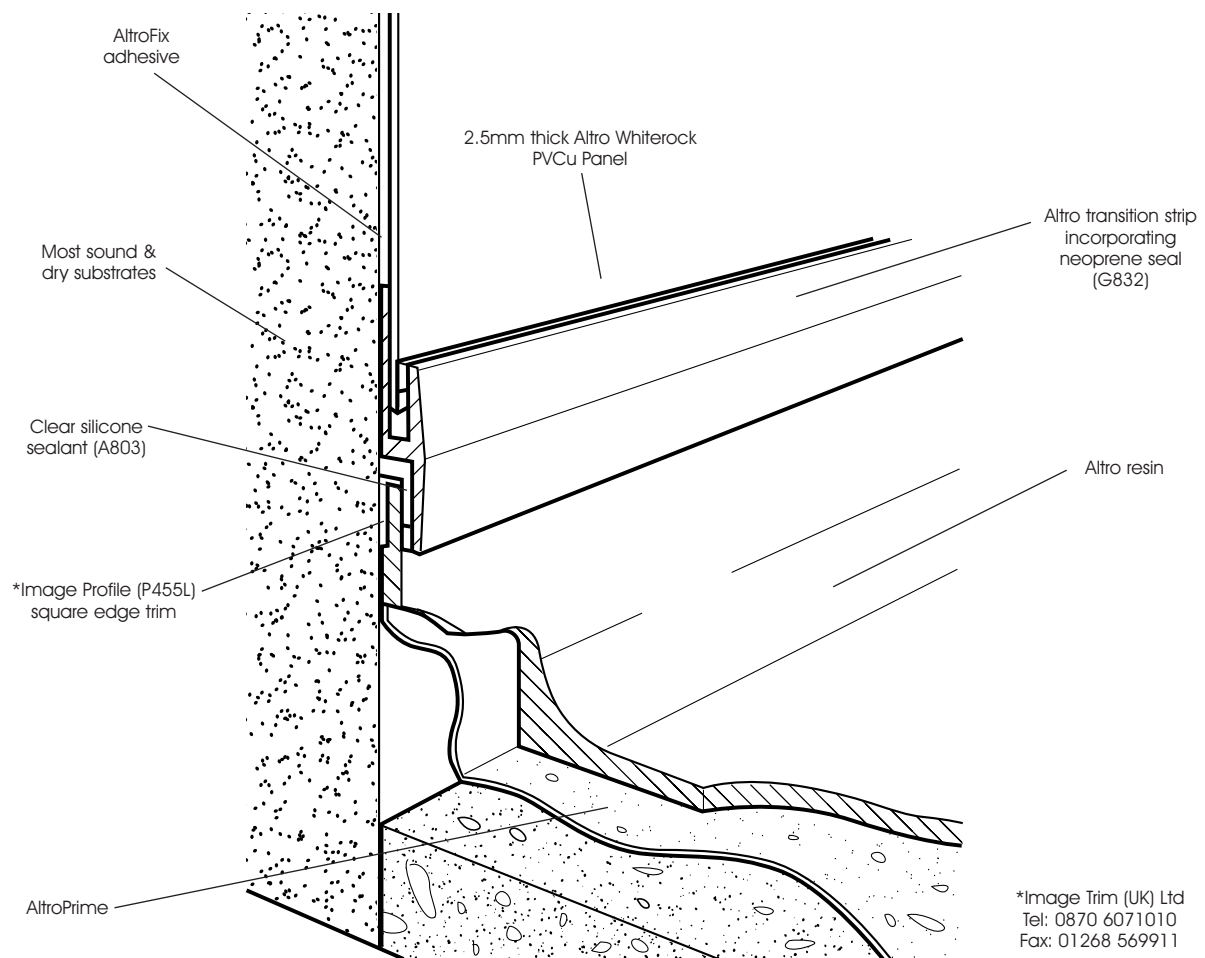

*Image Trim (UK) Ltd
Tel: 0870 6071010
Fax: 01268 569911

for further information or technical advice

tel: 01502 561364 fax: 01502 531461

e-mail walls@altro.com or explore www.altro.com